

Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU



FEATURES

The NA-PCU 4-20 mA electric actuator is designed to motorize 1/4 turn valves for control purposes. The maximum operating torque is 600 Nm. The robust NA-PCU actuator with its epoxy-coated IP67 aluminium housing is particularly suitable for actuating ball and butterfly valves installed in workshops or outdoors. It is fitted with a manual override and torque limiters (except on NA09). Numerous options available. 3-point operation. 4-20 mA proportional control.

AVAILABLE MODELS

NA09 PCU : 90 Nm to NA60 PCU : 600 Nm

Supply voltages : 230V AC.


LIMITS OF USE

Version	NA-PCU
Index of protection	IP 67
Ambient temperature	- 20°C / +70°C
Service factor	S2-70%



MECHANICAL CHARACTERISTICS

gearbox	sprockets in treated steel
Rotary angle	90° +/- 5°
Clutch release	by lever
Emergency control	by wheel
Torque limiter	Except NA09

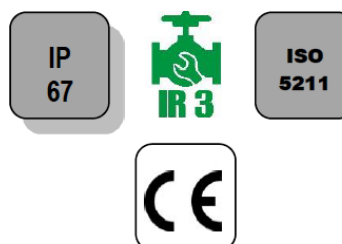

Electrical actuator	NA09	NA15	NA28	NA38	NA60
Torque (Nm)	90	150	280	380	600
Operating time (s)	17	20	24	24	29
ISO 5211	F07	F07/F10	F10/F12	F10/F12	F12/F14
Training star	17	17	22	27	27

DIRECTIVES AND MANUFACTURING STANDARDS

Machinery 2006/42/EC	Valve connection : ISO 5211
Low voltage 2006/95/EC	Electromagnetic compatibility 2004/108/EC

Information given as an indication only, and subject to possible modifications.

Gemini Valve B.V.



Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU



CONSTRUCTION

1	Position indicator	Polycarbonate
2	Capacitor	
3	Wiring terminal block	
4	Limit switches	
5	Housing	Aluminum alloy
6	Base	Aluminum alloy
7	Nuts	Steel
8	Dome	Polycarbonate
9	Electric motor	
10	Anti-condensation resistance	
11	Wheel	Steel
12	Manual override	Steel
13	Clutch release lever	Steel
14	Worm gear	Steel
15	4-20mA -0-10V control board	

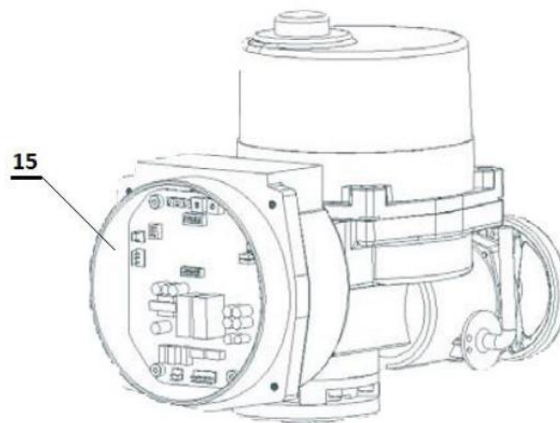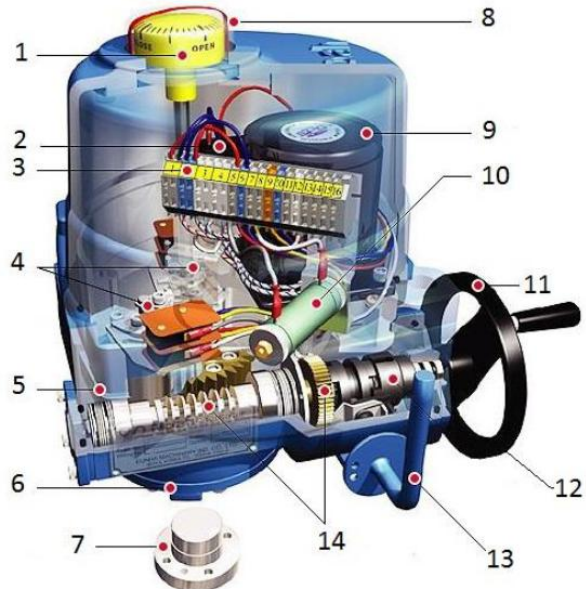

ELECTRICAL CHARACTERISTICS

Motor protection	Thermal	Anti-condensation	20 W resistor
Limit switches	2 adjustable contacts	Electrical connection NA	2 x P.E. M20x1.5 (supplied)
Auxiliary contacts	2 adjustable floating contacts		

Electrical actuator	NA09	NA15	NA28	NA38	NA60
Power (W)	25	40	40	60	90
Voltage	220V - 50Hz				
Holding current (A)	0.58	0.95	0.95	1.3	1.5
Call current (A)	0.89	1.12	1.37	1.85	2.34

Information given as an indication only, and subject to possible modifications.


Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU



DIMENSIONS (mm)

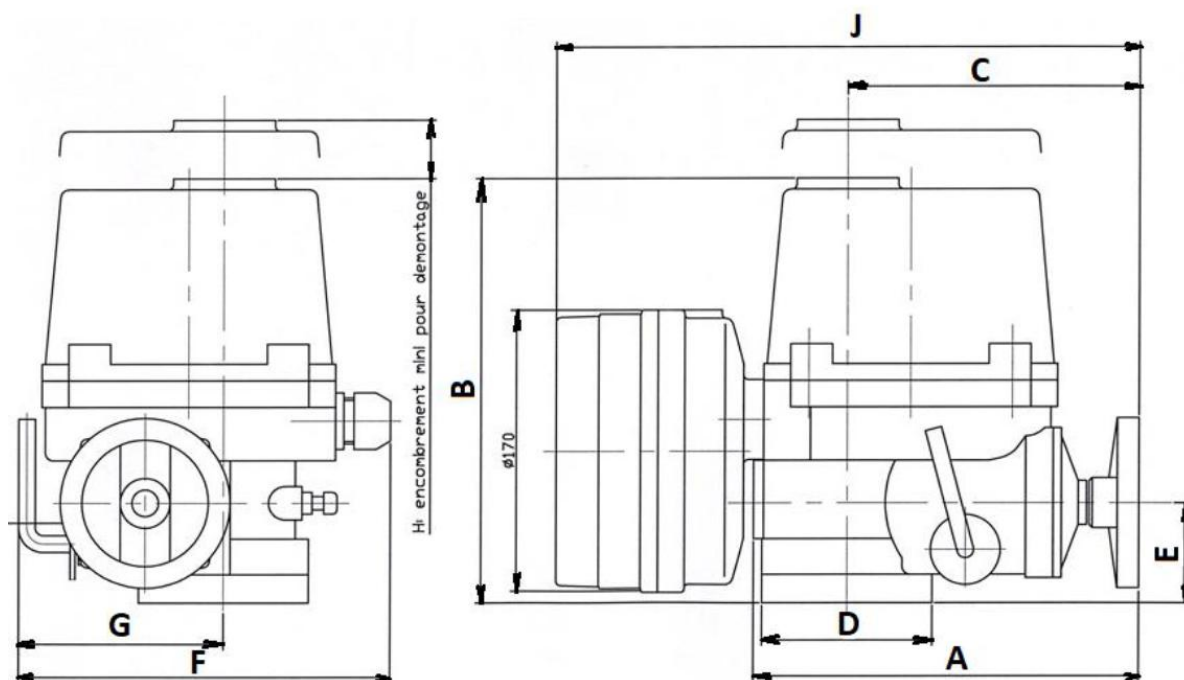

NA	A	B	C	D	E	F	G	H	J
09	231	255	175	102	60	223	113	108	349
15	261	255	184	120	60	266	139	108	376
28	285	302	202	145	70	300	159	130	-
60	325	343	226	175	78	349	191	178	-

Information given as an indication only, and subject to possible modifications.


Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU



1	Not connected
2	Not connected
3	Common
7	Not connected
8	Closing signal
9	Opening signal
10	Manual opening control
11	Manual closing control
12	Phase
13	Automatic operation : bridge with 12
14	+ input signal
15	- input signal
16	Recopy signal
17	Recopy signal
18	Auxiliary closing contact
19	Auxiliary closing contact
20	Auxiliary opening contact
21	Auxiliary opening contact

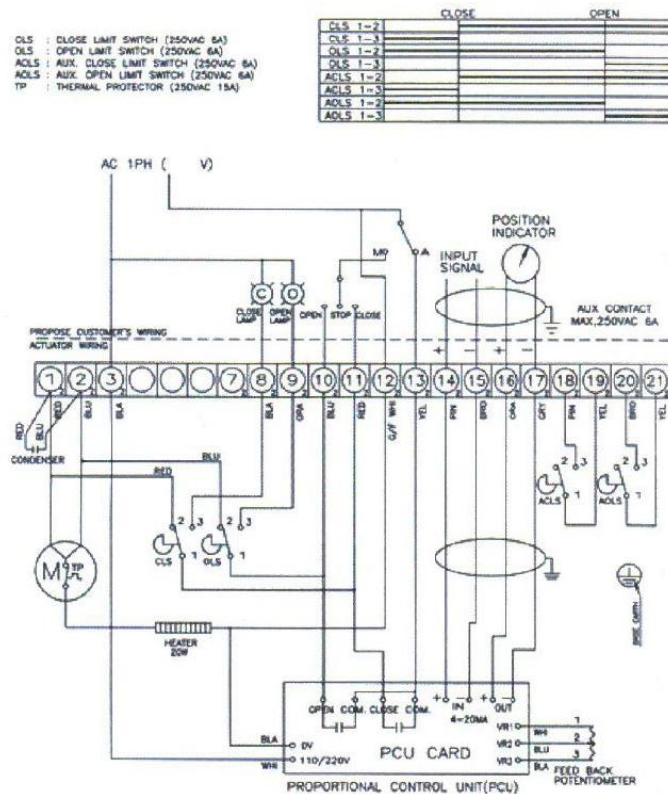

Information given as an indication only, and subject to possible modifications.


Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU



1	Not connected
2	Not connected
3	Common
7	Torque displacement indicator
8	Closing signal
9	Opening signal
10	Manual opening control
11	Manual closing control
12	Phase
13	Automatic operation : bridge with 12
14	+ input signal
15	- input signal
16	Recopy signal
17	Recopy signal
18	Auxiliary closing contact
19	Auxiliary closing contact
20	Auxiliary opening contact
21	Auxiliary opening contact

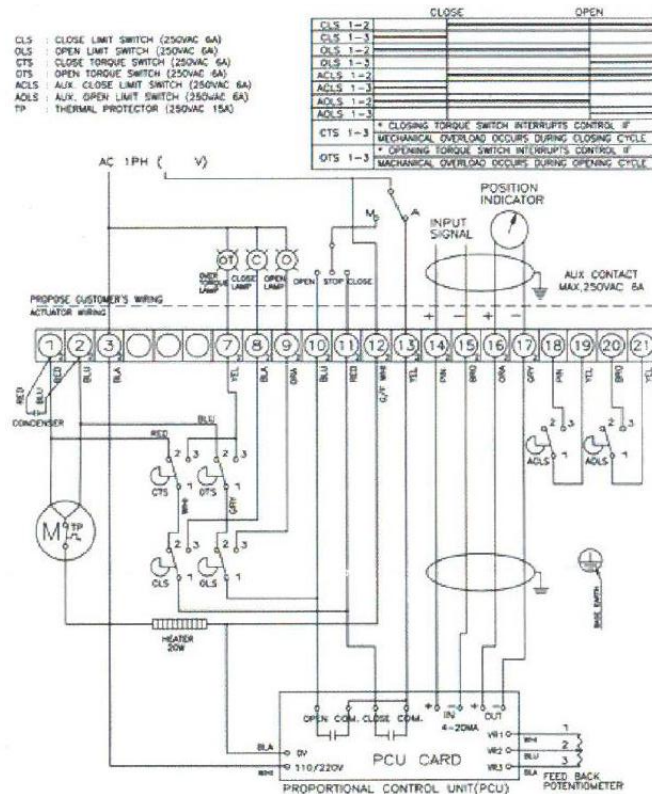

Information given as an indication only, and subject to possible modifications.

Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578


info@geminivalve.nl
www.geminivalve.nl
GVNAPCU



OPTIONS

1	NA PIU : version with feedback potentiometer
2	NA CPT : version with 4-20 mA position transmitter
4	NA LCU : version with local control
5	NA RBP : version with integrated battery safety pack
6	Earthquake test
7	Low temperature version -40°C
8	Version IP 68
9	Angles of rotation 120°, 135°, 180°, 270°.

DESCRIPTIF CIRCUIT PCU

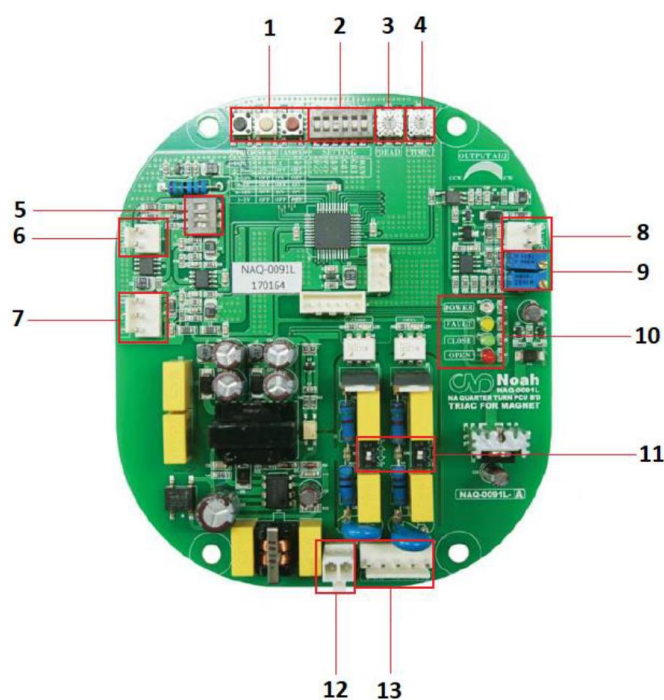

No.	NAME
①	ZERO Button
	SPAN Button
	AUTO SCAN Button
②	DIP SWITCH
③	DEAD BAND
④	TIME DELAY
⑤	DIP SWITCH FOR INPUT SETTING
⑥	INPUT CONNECTOR
⑦	POTENTIOMETER CONNECTOR


No.	NAME
⑧	OUTPUT CONNECTOR
⑨	OUTPUT VOLUME
⑩	CONTROL / WARNING LAMP
⑪	1PH/3PH Selectable DIP SWITCH
⑫	HEATER CONNECTOR
⑬	POWER, MOTOR CONTROL CONNECTOR

Information given as an indication only, and subject to possible modifications.

Gemini Valve B.V.


Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU

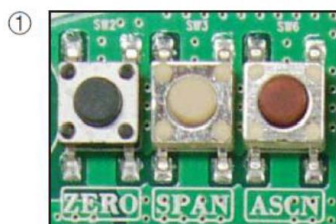

Name	Spec.
ZERO	Close manual control button / Input module button
SPAN	Open manual control button / Input module button
ASCN	AUTO SCAN BUTTON (ACTUATOR automatic control button) delivered from the factory the resistance value of potentiometer may can be changed if the user modifies its limit setting. Please make sure to press the autoscan button for at least 2 seconds before operating proportional control.

② DIP SWITCH

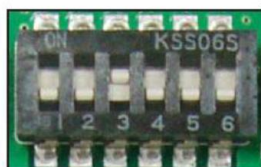

NO	NAME	SPEC	NO	NAME	SPEC
1	F C	FAIL CLOSE	4	CH1	DISCRETION SETTING
2	F O	FAIL OPEN	5	CH2	MANUAL SETTING
3	A F	A FULL 3.8 ~ 4.3 INPUT FULLY CLOSE 19.7 ~ 20.2 INPUT FULLY OPEN	6	REV	REVERSE ACTION



Name	Spec.
DEAD BAND	Mechanical steps at least (0.2ma)
TIME DELAY	Modulating starting time (1sec)

What is DEAD BAND ?

It's an area/band where no action occurs due to the ACTUATOR Input.

If the user inputs 12mA (50%), the ACTUATOR is supposed to stop exactly at 50% position. The ACTUATOR repeats from open to close in order to stop at 50% position at this point.

This is what we call hunting, and if the hunting effect repeatedly occurs the motor can be damaged.

Therefore a dead band is set to have some area in order to prevent this from happening.

It's set to have 0.05mA per gradation. If it is at 1PH when shipped from the factory, it is set to have a 0.2mA dead band.

If it is at 3PH, on the other hand, it is set to have a 0.3mA dead band.

ex) If it is set to have a 0.2mA dead band, the ACTUATOR is positioned between 11.8mA to 12.2mA.

In case the ACTUATOR stops at the position of 12.1mA, the second least movement area will be at 12.3mA.

At this position no action occurs even when there is the input signal.

What is DELAY TIME ?

This is when there is an instant noise or disturbance from the outside affecting the input signal and therefore the ACTUATOR can't function. The delay time setting is to prevent this from happening. If the input signal does not change for more than the time set, the ACTUATOR will kick in. The setting for the delay time is 0.5 seconds per gradation. When shipped from the factory the delay time is set at 1 second.


Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU




⑤ DIP SWITCH for INPUT Setting

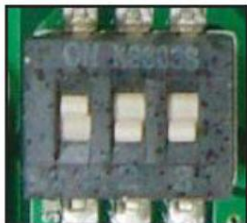


INPUT \ S/W	1	2	3
4-20mA	ON	OFF	OFF
2 - 10V	OFF	ON	OFF
0 - 5V	OFF	OFF	ON
0 - 10V	OFF	ON	ON
1 - 5V	OFF	OFF	OFF

⑥ INPUT CONNECTOR

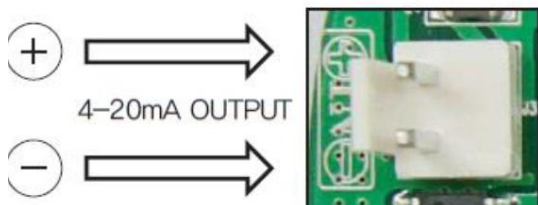


⑧ 4-20mA OUTPUT

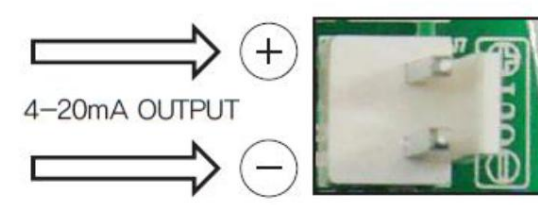


⑦ POTENTIOMETER CONNECTOR

	COLOR	Resistance	
P1	White	LOW	0~1000Ω
P2	Blue	COM	
P3	Black	HIGH	

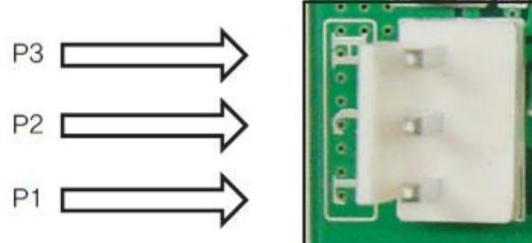

When shipped from the factory and at full close,
it is set at 80~120Ω.
(* Refer to P13 for Potentiometer setting)

⑩ CONTROL / WARNING LAMP

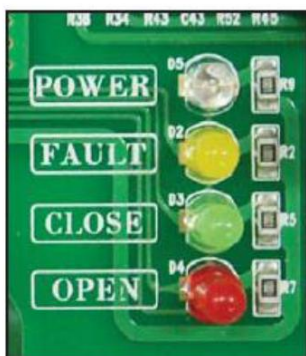

LED LAMP				Cause
WHITE	YELLOW	RED	GREEN	
lighting	flickering	lights out	flickering	Potentiometer Error
lighting	flickering	flickering	lights out	Potentiometer P1, P3 Error
lighting	flickering	lights out	lights out	Input Error
lighting	flickering	flickering	flickering	Pcu Card Memory Error

Information given as an indication only, and subject to possible modifications.

Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU




⑪ 1PH/3PH Selectable DIP SWITCH



- Micro current on the board can cause malfunction in magnetic in 3ph motor.
- * Dip switches should be switched on in 1ph actuator and should be switched off in 3ph actuator. Warranty does not cover damage by incorrect dip switch setting.


⑫ HEATER CONNECTOR

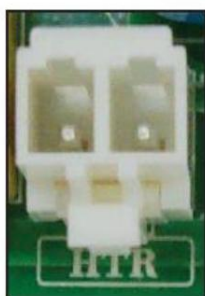

MAIN POWER	AC 110V~230V, DC 24V
W	20W

- The Heater may be attached or detached according to the user environment.

⑬ MOTOR & MAIN POWER CONNECTOR

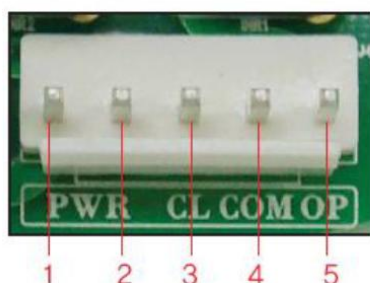

No.	Spec.
1	MAIN POWER
2	AC110~230V, DC24V
3	MOTOR CW
4	COM
5	MOTOR CCW

⑭ DC MOTOR DRIVE CONNERCTOR 1



⑮ DC MOTOR DRIVE CONNERCTOR 2




Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU




Configuration and command

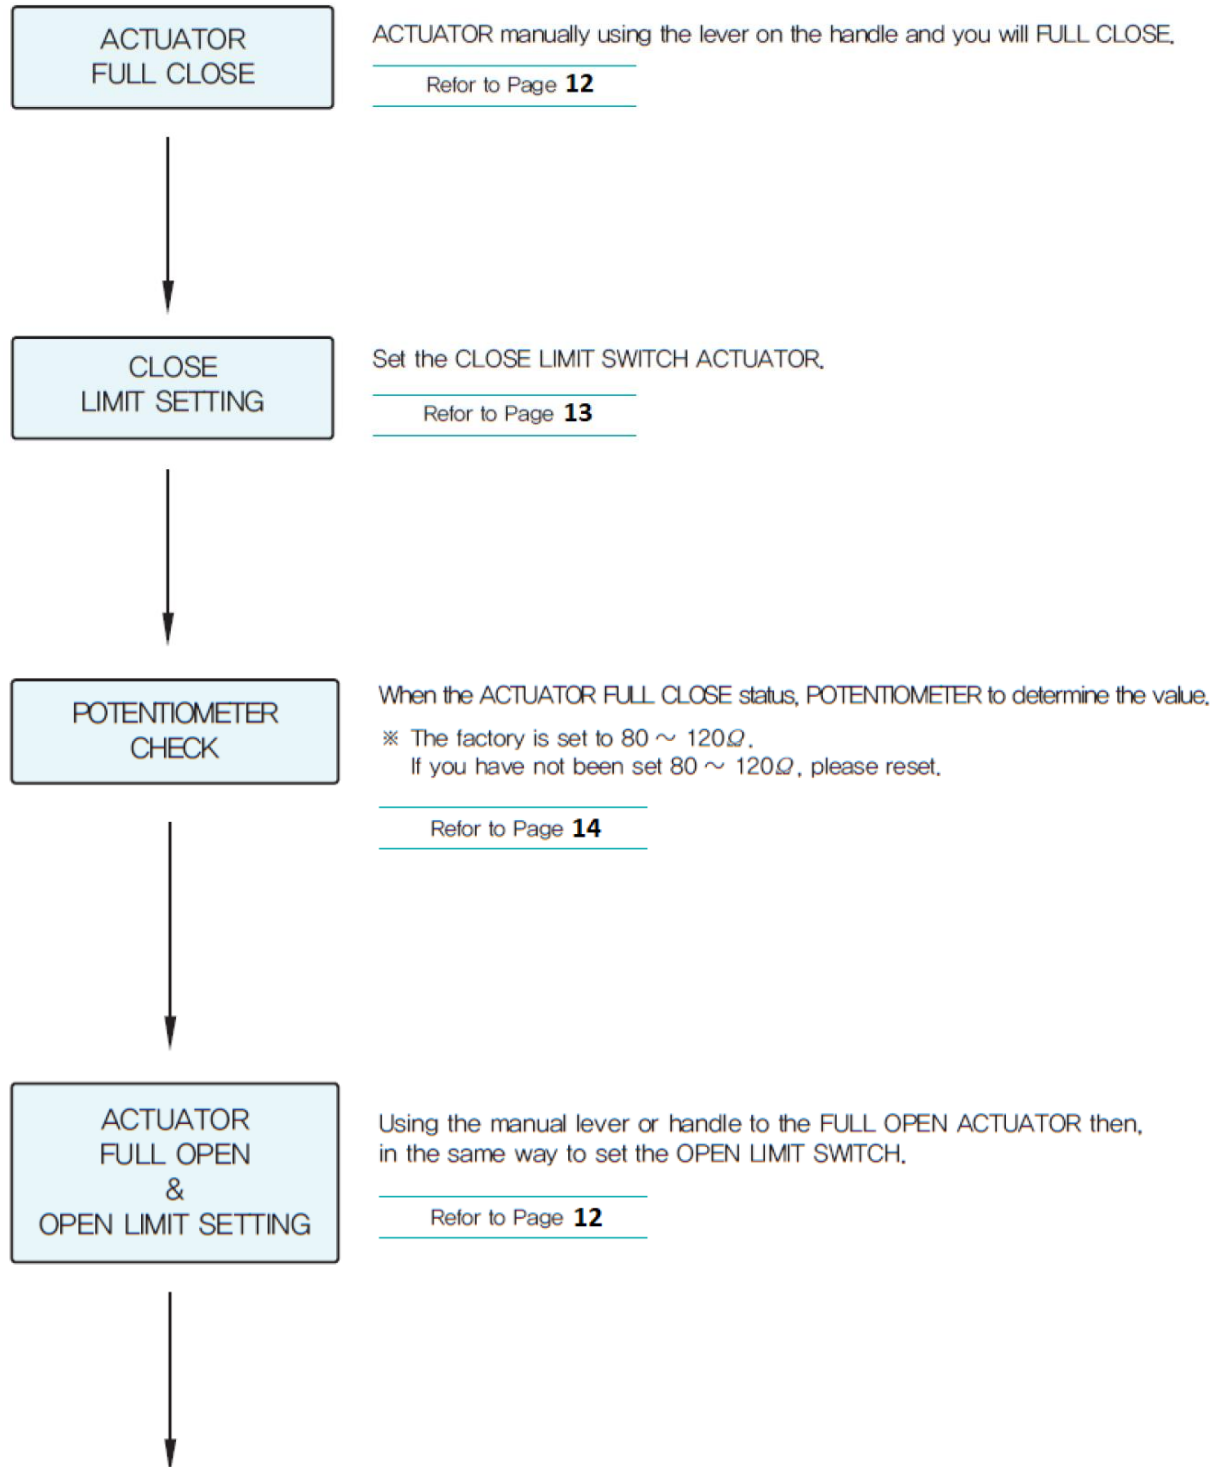

Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU

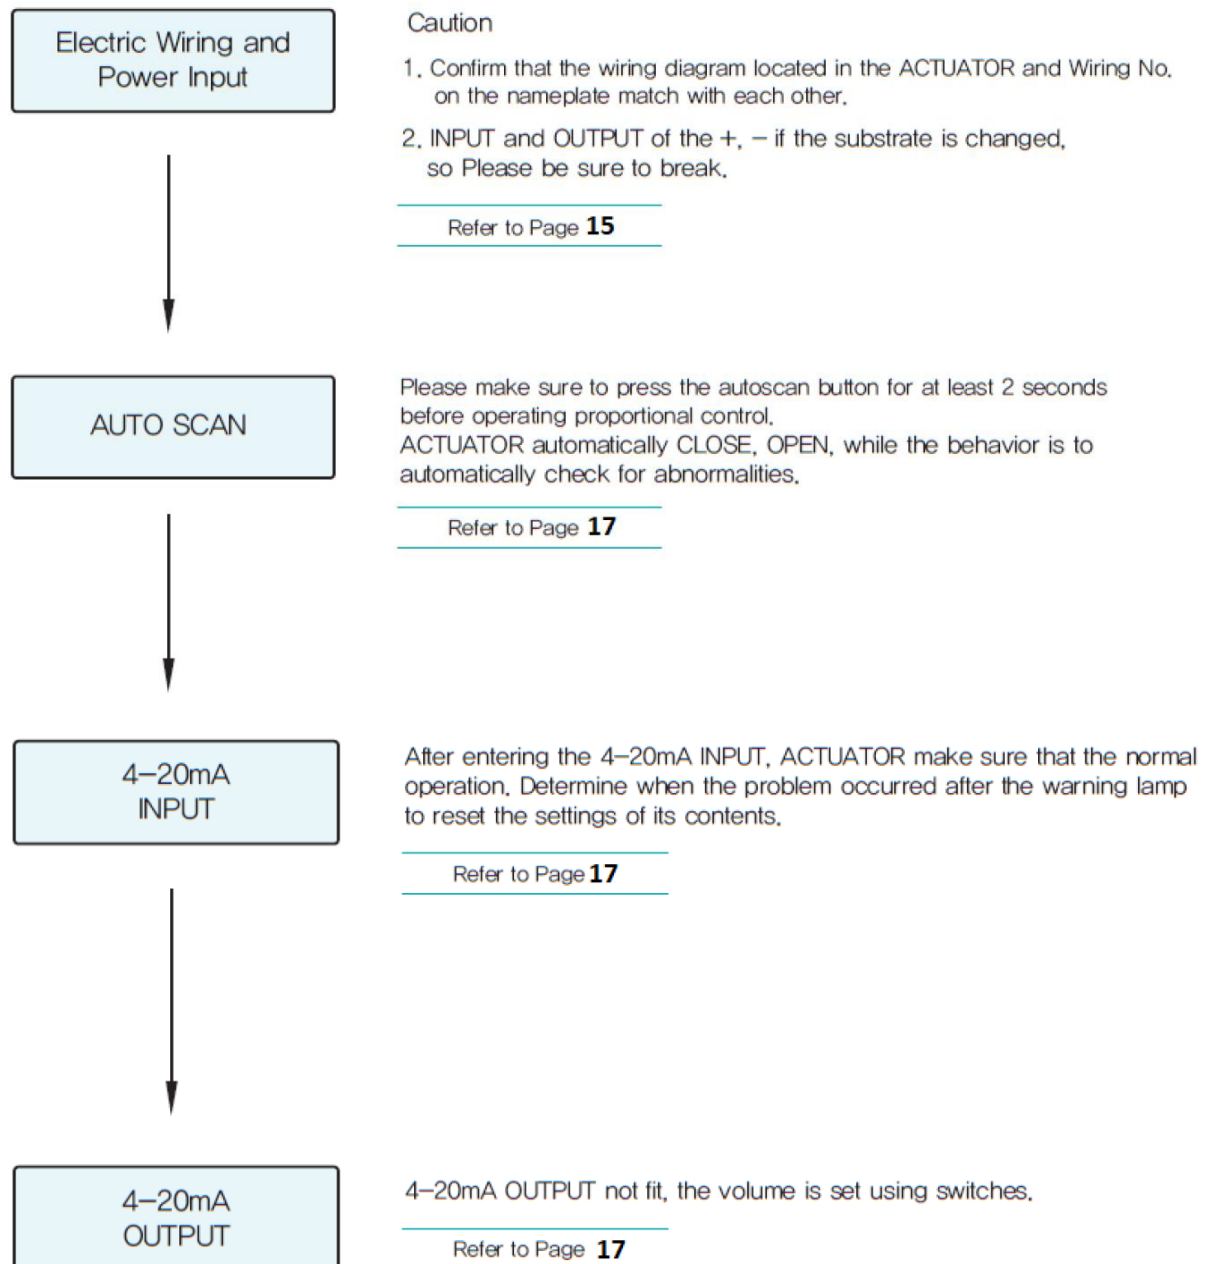

Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578


info@geminivalve.nl
www.geminivalve.nl
GVNAPCU



Manual Mode

When you pull the lever located on the side of ACTUATOR handle toward the handle, the lever stands straight. If you turn the handle in that condition, the ACTUATOR moves.

If the lever does not stand straight when you pull the lever toward the handle, turn the handle halfway while pulling the lever toward the handle.

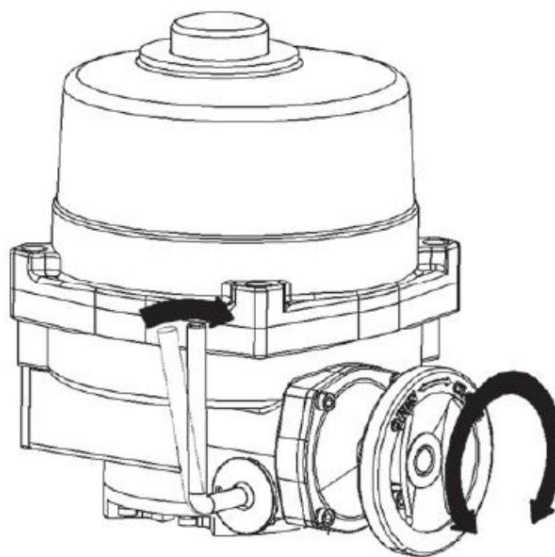

- When you turn the handle clockwise: CLOSE
- When you turn the handle counter clockwise: OPEN

After manual operation, leave the lever as it is. It will automatically return to the previous stage of manual operation by the internal Hand /Auto Decoupling System when the ACTUATOR is powered on.

If the Lever does not stand straight even if you pull it in trying to manually operate the ACTUATOR due to some problems during the ACTUATOR operation, you have to check the possibility of Jamming.

For more information, refer to the NA Series general manual.

What is Jamming effect?

It is when the worm gear is pressed by the stopper bolt and the gear does not move. The lever and the handles will not move at this point. (See row 14 on P18 for trouble shooting)


Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU




Pull the lever located on the side of the handle toward the handle to make it stand straight and then turn the handle clockwise to fully close the Actuator.

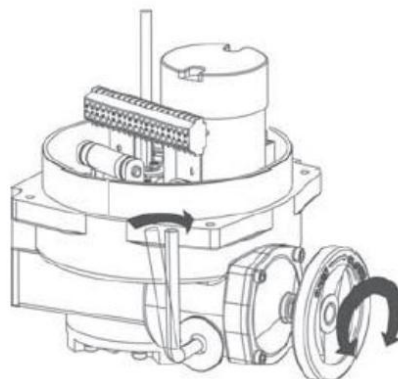

Loosen the fixed bolt of Close Limit Switch and align the Limit Switch to meet the contact point of Micro Switch.

AOLS	Dry Open Limit Switch
ACLS	Dry Close Limit Switch
OLS	Open Limit Switch
CLS	Close Limit Switch

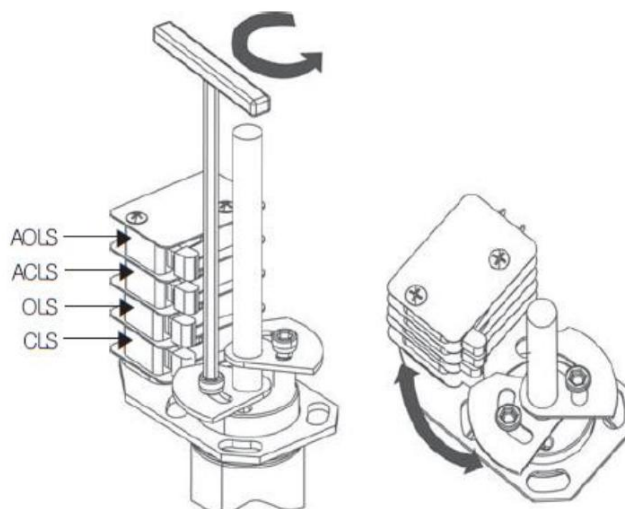

Firmly fasten the fixed bolt again.

As for Open Limit Switch Setting, follow the instruction of Close Limit Switch Setting.

For more information, please refer to the NA Series manual.

Information given as an indication only, and subject to possible modifications.


Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU



Potionmeter setting

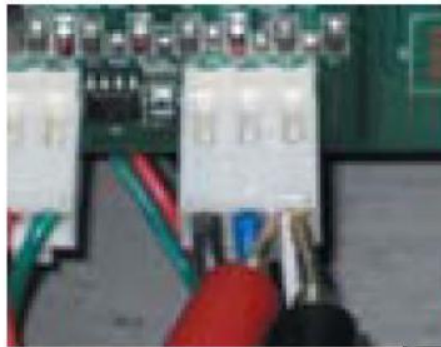

POTENTIOMETER
Check



Change the potentiometer
value by altering the gear.



POTENTIOMETER Check

- Actuator delivered full close at $80 \sim 120 \Omega$
- After limit setting it should check at closed $80 \sim 120 \Omega$
- Make actuator full closed and power off by moving of gear



Warning when setting the POTENTIOMETER:

When setting the resistance value on the POTENTIOMETER, always operate when the ACTUATOR power is OFF.

If the power is on, the resistance value on the calibrator will not show accurately.

- When finished setting the device, fix the mudu bolt so that the gear will not move.

Information given as an indication only, and subject to possible modifications.

Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU




Electrical wiring

Separate the cover of the ACTUATOR by loosening the four cover bolts.


Confirm that the wiring diagram located in the ACTUATOR and Wiring No. on the nameplate match with each other.

Confirm that the main power and power supply described on the name plate of ACTUATOR match with each other.

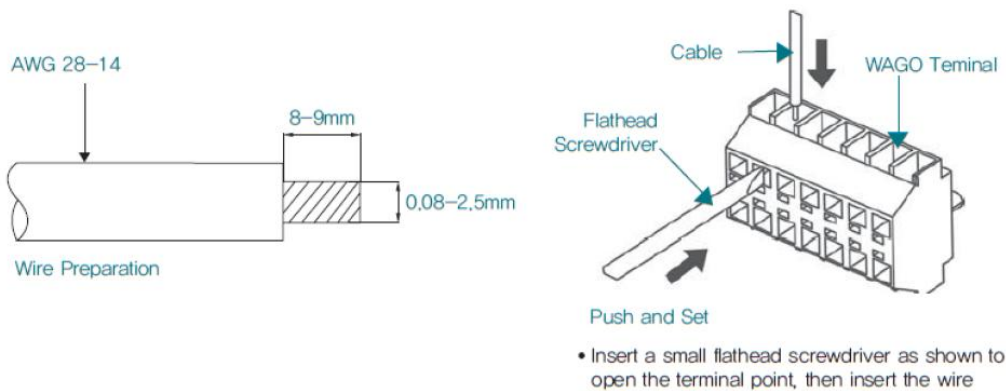

NA-Series uses a WAGO brand terminal strip to allow easy wiring and to protect against vibration.

Be sure to properly ground the ACTUATOR wiring to the grounding terminals provided on the inside and outside of the actuator body.

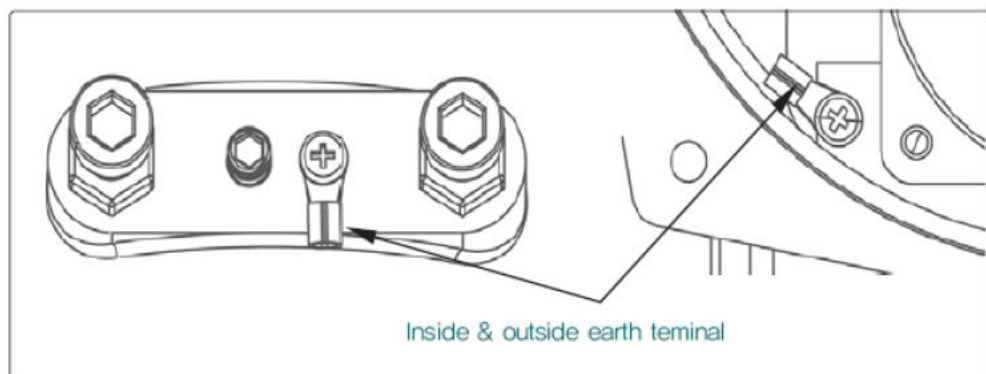

Be sure to wire and energize the heater that is provided.

Each ACTUATOR must be powered by their own individual relays to prevent voltage feedback and ACTUATOR damage.

Information given as an indication only, and subject to possible modifications.

Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU




With a 3-phase (380V, 440V) powered ACTUATOR, care must be taken to confirm the proper motor rotation when the power and signal are applied. If the ACTUATOR rotates in the reverse direction than what is expected, the limit switches will not function correctly and a mis-wire has occurred. Corrective action needs to be taken.

With power disconnected, manually operate the ACTUATOR to a mid position.

Apply power / signal to rotate the ACTUATOR open or closed and confirm the rotation is correct.

If the rotation is incorrect, then shut off the ACTUATOR and re-wire two of the three wires as shown.

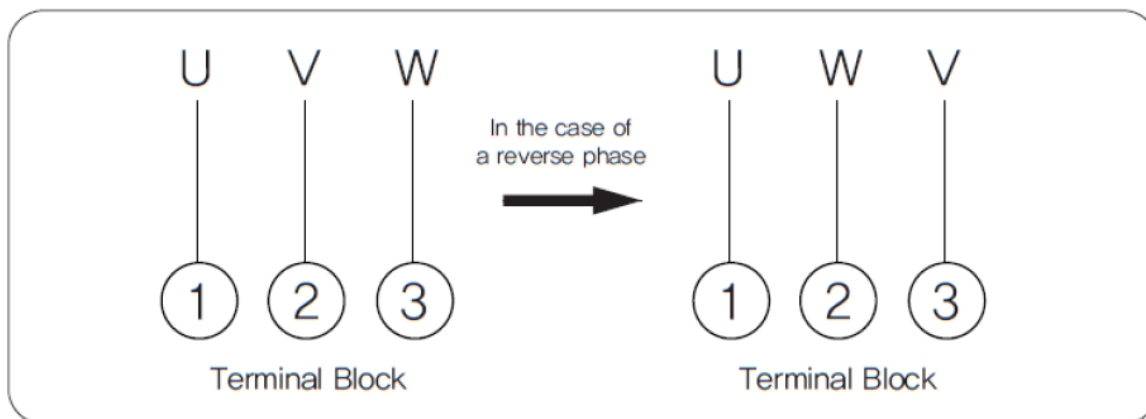

After the wiring is completed in the ACTUATOR, use wire ties to clean up the ACTUATOR and group wires together, and be certain that the wires are secured away from any moving parts, remove any loose debris.

When all the work is completed, replace the top cover and secure it using the four cover screws.

Apply the power and do a final check to confirm proper operation.

IN / OUTPUT of the +, – so be sure to check the change. (+, – If a change occurs in the PCU board.)



Main Power must only be applied when the top cover is re-installed on the ACTUATOR body.
If the main power is on while wiring the ACTUATOR stop work immediately and turn the power off.
Only then is it safe to proceed.

Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU




Automatic adjustment and input adjustment

Using the manual lever and handle, Limit settings and POTENTIOMETER to complete the setup.

ACTUATOR wire terminal block after wiring the power switch.

AUTO SCAN PUSH (2 sec)

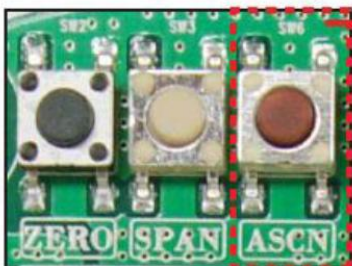

Delivered from the factory the resistance value of potentiometer may can be changed if the user modifies its limit setting.
Please make sure to press the autoscan button for at least 2 seconds before operating proportional control.



4–20mA INPUT input to verify that the normal operation.

If not, the normal operation of the DIP SWITCH INPUT no.4 optional modulation of setting please reset.

OUTPUT Setting

ZERO : 4mA VOLUME SWITCH

SPAN : 20mA VOLUME SWITCH

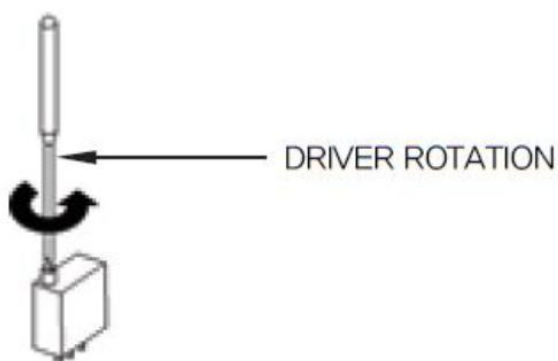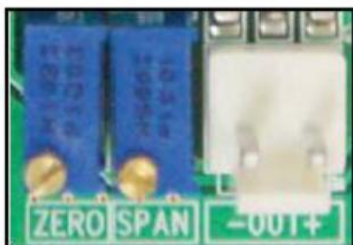

If the 4–20mA output does not work, use the volume switch and change the 4–20mA output.
Generally the error range of IN/OUTPUT is $\pm 0.2\text{mA}$.

Information given as an indication only, and subject to possible modifications.

Gemini Valve B.V.


Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU




Other settings

INPUT in case of error, ACTUATOR FULL CLOSE automatically when

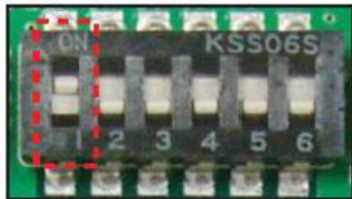


DIP SWITCH No.1 Button ON.

INPUT in case of error, ACTUATOR FULL OPEN automatically when

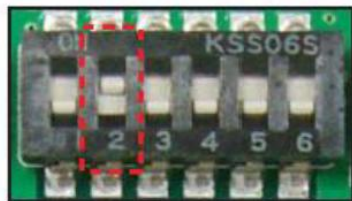


DIP SWITCH No.2 Button ON.

When the ACTUATOR reverse setting

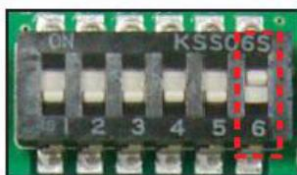

DIP SWITCH No.6 Button ON.

A FULL function is used

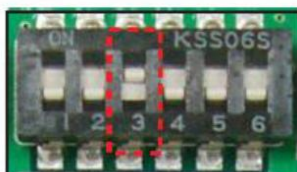

DIP SWITCH No.3 Button ON.

If the input signal is at 3,8~4,3mA, the ACTUATOR turns to a FULL CLOSE.

If the input signal is at 19,7~20,2mA, the ACTUATOR turns to a FULL OPEN.

Gemini Valve B.V.


Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU



INPUT is at 4–20mA 0–10V or 0–5V when change


DIP SWITCH Change

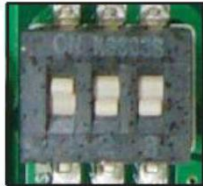

INPUT \ S/W	1	2	3
4–20mA	ON	OFF	OFF
2 – 10V	OFF	ON	OFF
0 – 5V	OFF	OFF	ON
0 – 10V	OFF	ON	ON
1 – 5V	OFF	OFF	OFF

DIP SWITCH setting to change to fit the table.

Optional Modulation

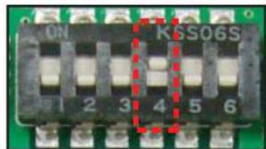

DIP SWITCH No.4 Button ON.

0V input, Push the ZERO BUTTON.




ACTUATOR CLOSE

After the 5V or 10V input, SPAN BUTTON push



ACTUATOR OPEN

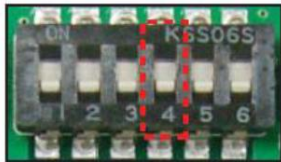

DIP SWITCH No.4 Button OFF.

0–10V or 0–5V input, to verify that the normal operation.

Gemini Valve B.V.


Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU



INPUT 4–20mA (0–10V) and 6–18mA (1–9V) If you want to change a current signal

Optional Modulation

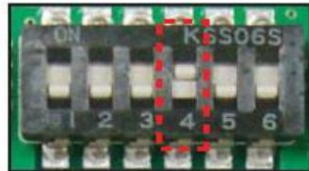

DIP SWITCH No.4 Button ON.

6mA input, Push the ZERO BUTTON.




ACTUATOR CLOSE

After the 18mA input, SPAN BUTTON push



ACTUATOR OPEN

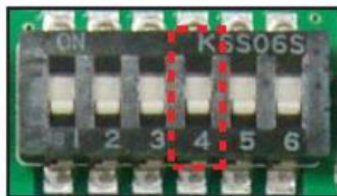

DIP SWITCH No.4 Button OFF.

6–18mA input, to verify that the normal operation.

Information given as an indication only, and subject to possible modifications.

Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU



Assembly order




POTENTIOMETER ASSEMBLE




GEAR ASSEMBLE



WIRE

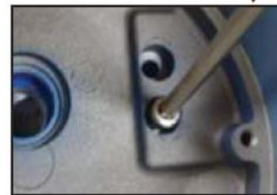

PCU BODY ASSEMBLE

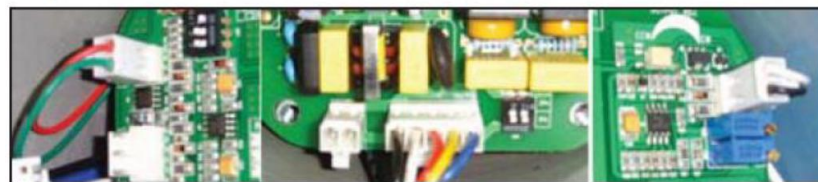

PCU WIRE & BOARD CONNECTOR



POTENTIOMETER(Ω) CHECK




WIRING & POWER ON



BOARD POWER ON
LED SIGNAL CHECK



IN/OUT CHECK
CLOSE: 4mA, OPEN: 20mA

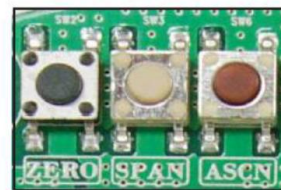

ASCN PUSH (2SEC)
ACTUATOR FULL CLOSE/

Information given as an indication only, and subject to possible modifications.

Gemini Valve B.V.

Zijperstraat 29, 1823CX Alkmaar
Netherlands
Tel.: +31(0) 161-227.909
Mobile: +316 1358 2578

info@geminivalve.nl
www.geminivalve.nl
GVNAPCU



Troubleshooting

PCU card is due to various reasons, does not function properly if you use the environment and actuators determine the frequency of use, and if there is no more than refer to the following items to verify abnormality.

Problem	Cause	Solution
Manual override will not move	The worm wheel and mechanical limit stop is jammed	Loosen the mechanical limit stop and the valve mounting bolts. Correct the mechanical stop position and then secure the mounting bolts and limit stop.
Level will not hold position when pulled toward the handwheel		
When the OVER LIMIT SWITCH		
Actuator to move the handle when not in operation		
In manual operations, the ACTUATOR will not cycle full open or full close	Limit switch malfunction and / or mechanical limit stop set incorrectly	Reset the limit switch cam and reset the mechanical limit stop
ACTUATOR suddenly stops during operation	The over torque switch has tripped	Valves torque has increased. Valve needs to be checked/ repaired or replaced, or the over torque switch has failed and needs to be reset.
When the motor does not operate	Main power failure	Main power check
	Wire disconnect or Short circuit	Replace defective wire
	Motor or condenser is damage	Replace motor or condenser
	PCU Board failure	Replace PCU Board
When 3 phase operation rotates ACTUATOR in the oppsit direction than the signl that os applied	Phase reversal	Switch two of the 3 phase wires
When ACTUATOR continues to rotate even after the cam strikes the limit switch		
When PCU Board FAULT LAMP flashes	INPUT failure circuit & Disconnection	INPUT Check
PCU board FAULT LAMP lighted, When CLOSE LAMP flashes	POTENTIOMETER disconnection	POTENTIOMETER Check
PCU board FAULT LAMP lighted, When the lights OPEN LAMP	POTENTIOMETER P1, P3 reversal	P1, P3 re-wiring

Information given as an indication only, and subject to possible modifications.